Cabled Vantage Pro[®] & Vantage Pro Plus™ Stations

Including Fan-Aspirated Models



6150C, 6160C, 6151C, 6161C

VANTAGE PRO

The Vantage Pro (6150C, 6151C) and Vantage Pro Plus (6160C, 6161C) cabled stations include two components: the Integrated Sensor Suite (ISS) and the console. The ISS contains the sensor interface module, rain collector, anemometer, and either a passive radiation shield or a fan-aspirated radiation shield. The Van-

tage Pro console provides the user interface, data display, A/D conversion, and calculations. The Vantage Pro Plus station includes two additional sensors that are optional on the Vantage Pro: the UV Sensor and the Solar Radiation Sensor. The console and ISS are powered by an AC-power adapter connected to the console. The Fan-Aspirated Radiation Shield is powered by it's own AC-power adapter. Batteries can be installed in the console to provide a backup power supply. Use WeatherLInk for Vantage Pro to interface with a computer, to log data, and to upload weather information to the internet.

The **6150C** and **6160C** rely on passive shielding to reduce solar-radiation induced temperature errors in the outside temperature sensor readings. The Fan-aspirated **6151C** and **6161C** combine passive shielding with a fan that draws outside air in over the temperature and humidity sensors, providing a much more accurate temperature reading than that available using passive shielding alone.

Specifications

 Console Operating Temperature
 +14° to +140°F (-10° to +60°C)

 Display Temperature
 +32° to +140°F (0° to +60°C)

 Non-operating Temperature
 -5° to +158°F (-20° to +70°C)

Battery Life (no AC power)1 month (approximately)

Connectors Modular RJ-11

Integrated Sensor Suite (ISS)

 Operating Temperature
 -40° to +140°F (-40° to +60°C)

 Non-operating Temperature
 -50° to +158°F (-45° to +70°C)

Power Source, ISS SIM/Fan-Aspiration $\dots \dots$ Vantage Pro console / AC-power adapter

Wind Speed Sensor Wind cups with magnetic switch Wind Direction Sensor Wind vane with potentiometer

Temperature Sensor Type ... Platinum wire thermistor
Relative Humidity Sensor Type ... Film capacitor element
Housing Material ... UV-resistant ABS plastic

Dimensions

Neight

Sensor Inputs

Sensor Outputs (as displayed on console)

	itputs (as displayed on console)	
General His	torical Data	. Includes the past 24 values listed unless otherwise noted; all can be cleared and all totals
		reset
		. Includes the earliest time of occurrence of highs and lows; period begins/ends at 12:00 am
		Period begins/ends at 12:00 am on the first of the month
		. Period begins/ends at 12:00 am on the first of January unless otherwise noted
		. Current data appears in the right most column in the console graph and represents the latest value within the last period on the graph; totals can be set or reset
Gra	ph Time Interval Length	. 1 min., 10 min., 15 min., 1 hour, 1 day, 1 month, 1 year (user-selectable, availability depends upon variable selected)
Gra	aph Time Span	. 24 Intervals + Current Interval (see Graph Intervals to determine time span)
Gra	aph Variable Span (Vertical Scale)	. Automatic (varies depending upon data range); Maximum and Minimum value in range appear in ticker
Ala	rm Indication	. Alarms sound for only 2 minutes (time alarm is always 1 minute) if operating on battery power. Alarm message is displayed in ticker as long as threshold is met or exceeded.
He	data Interval	Alarms can be silenced (but not cleared) by pressing the DONE key.
Forecast		·
		Barometric Reading & Trend, Wind Speed & Direction, Rainfall, Temperature, Humidity, Latitude & Longitude, Time of Year
	date Interval	
		. Icons on top center of display; detailed message in ticker at bottom . Sky Condition, Precipitation, Temperature Changes, Wind Direction and Speed Changes
	Temperature (sensor located in ISS)	
Res	solution and Units	. Current Data: 0.1°F or 1°F or 0.1°C or 1°C (user-selectable) nominal (see Fig. 1)
Rai	nge	Historical Data and Alarms: 1°F or 1°C (user-selectable)
		.±1°F (±0.5°C) up to 110°F (43°C), ±2°F (±1°C) over 110°F (43°C) (see Fig. 2)
		. +4°F (2°C) at solar noon (insolation = 1040 W/m², avg. wind speed ≤ 2 mph (1 m/s)) (reference: RM Young Model 43408 Fan-Aspirated Radiation Shield)
Rad	diation Induced Error (Fan-Aspirated)	.+0.6°F (0.3°C) at solar noon (insolation = 1040 W/m², avg. wind speed ≤ 2 mph (1 m/s)) (reference: RM Young Model 43408 Fan-Aspirated Radiation Shield)
Hn	date Interval	
		. Instant Reading (user adjustable); Daily, Monthly, Yearly High and Low
His	torical Data	. Hourly Readings; Daily and Monthly Highs and Lows
	irms	
Inside Temperature (sensor located in console)		
		. Current Data: 0.1°F or 1°F or 0.1°C or 1°C (user-selectable) nominal (see Fig. 1)
		Historical Data and Alarms: 1°F or 1°C (user-selectable)
Rai	nge	
		.±1°F (±0.5°C) up to 110°F (43°C), ±2°F (±1°C) over 110°F (43°C)
	date Interval	
		. Instant Reading (user adjustable); Daily and Monthly High and Low
His	torical Data	. Hourly Readings; Daily and Monthly Highs and Lows
Ala	ırms	. High and Low Thresholds from Instant Reading
Wind Sp	eed	
	solution and Units	
Rai	nge (large wind cups)	. 2 to 150 mph, 2 to 130 knots, 1 to 67 m/s, 3 to 241 km/h
		. 3 to 175 mph, 3 to 150 knots, 1.5 to 79 m/s, 5 to 282 km/h
		Instant Reading: 2.5 seconds, 10-minute Average: 1 minute
		. ±2 mph (2 kts, 3 km/h, 1 m/s) or ±5%, whichever is greater
	curacy (small wind cups)	. ±3 mph (3 kts, 5 km/h, 1.5 m/s) or ±5%, whichever is greater .540' (165 m)
Cu	rrent Data	Instant Reading; 10-minute and Hourly Average; Hourly High; Daily, Monthly, Yearly High with Direction of High
His	torical Data	. 10-min. and Hourly Averages; Hourly Highs; Daily, Monthly, Yearly Highs with Direction of Highs
Ala	ırms	. High Thresholds from Instant Reading and 10-minute Average
Wind Dir		J
Dis	play Resolution	. 16 points (22.5°) on compass rose, 1° in numeric display
	curacy	
		. Instant Reading (user adjustable); 10-min. Dominant; Hourly, Daily, Monthly Dominant
		Past 6 10-min. Dominants on compass rose only; Hourly, Daily, Monthly Dominants

Wind Chill (Calculated) Resolution and Units 1°F or 1°C (user-selectable) Variables Used Instant Outside Temperature and 10-min. Avg. Wind Speed Current Data Instant Calculation; Hourly, Daily, Monthly Low Historical Data...... Hourly, Daily, Monthly Lows Alarm Low Threshold from Instant Calculation Daily/Storm Rainfall Range 0 to 99.99" (0 to 9999 mm) Monthly/Yearly/Total Rainfall Range 0 to 199.99" (0 to 19999 mm) the bucket), whichever is greater For rain rates from 2"/hr (50 mm/hr) to 4"/hr (100 mm/hr): $\pm 5\%$ of total or ± 0.01 " (0.25 mm) (0.01" = one tip of the bucket), whichever is greater storm event selectable) and Storm (with begin date); Umbrella is displayed when 15 minute Total exceeds zero begin and end dates) Alarms High Threshold from Latest Flash Flood (15-min. Total, default is 0.50", 12.7 mm), 24-hour Total, Storm Total, Rain Rate Calculation Method Measures time between successive tips of rain collector. Elapsed time greater than 15 minutes or only one tip of the rain collector constitutes a rain rate of zero. Historical Data.....1-min Reading; Hourly, Daily, Monthly, Yearly Highs Alarm High Threshold from Instant Reading Barometric Pressure (sensor located in console) Elevation Range-999' to +12,500' (-305 m to 3810 m) Uncorrected Reading Accuracy ±0.03" Hg (±0.8 mm Hg, ±1.0 hPa/mb) (at room temperature) Sea-Level Reduction Equation Used United States Method employed prior to use of current "R Factor" method Equation Source Smithsonian Meteorological Tables Elevation Accuracy Required ±10' (3m) to meet equation accuracy specification Trend Indication 5 position arrow: Rising (rapidly or slowly), Steady, or Falling (rapidly or slowly) Low Threshold from Current Trend for Storm Warning (Falling Trend) Range for Rising and Falling Trend Alarms 0.01 to 0.25" Hg (0.1 to 6.4 mm Hg, 0.1 to 8.5 hPa/mb) Inside Relative Humidity (sensor located in console)

Historical Data Hourly Readings; Daily, Monthly Highs and Lows

Alarms High and Low Threshold from Instant Reading

4, Cabled Vantage Pro® & Vantage Pro Plus™ Stations VANTAGE PRO

Outside Relative Humidity (sensor located in ISS) Variables Used Instant Outside Temperature and Instant Outside Relative Humidity Current Data......Instant Calculation; Daily, Monthly High and Low Historical Data Hourly Calculations; Daily, Monthly Highs and Lows Heat Index (calculated) Formulation Used.......Steadman (1979) modified by US NWS/NOAA and Davis Instruments to increase range of use Alarm......High Threshold from Instant Calculation Evapotranspiration (calculated, requires solar radiation sensor) CIMIS ET weather station Calculation and Source......Penman-Monteith Equation as implemented by CIMIS (California Irrigation Management Information System) including Net Radiation calculation Current Data.....Latest Hourly Total Calculation, Daily, Monthly, Yearly Total Historical Data Hourly, Daily, Monthly, Yearly Totals Solar Radiation (requires solar radiation sensor) Accuracy±5% of full scale (Reference: Eppley PSP at 1000 W/m^2) Temperature Coefficient.....-0.067% per °F (-0.12% per °C); reference temperature = 77°F (25°C) Update Interval 50 seconds (5 minutes when dark)

Temperature Humidity Sun Wind Index (requires solar radiation sensor)

Sources and Formulation Used United States National Weather Service(NWS)/NOAA

Steadman (1979) modified by US NWS/NOAA and Davis Instruments to increase

range of use and allow for cold weather use

Wind Speed, 10-minute Average Solar Radiation

added or subtracted from this base to give an overall effective tempertature

Current Data......Instant and Hourly Calculation; Daily, Monthly High

Historical Data Hourly Calculation; Daily, Monthly Highs
Alarm High Threshold from Instant Reading

Ultra Violet (UV) Radiation Index (requires UV sensor)

Accuracy±5% of full scale (Reference: Yankee UVB-1 at UV Index of 10 (extremely high))

Current Data......Instant Reading and Hourly Average; Daily, Monthly High

Ultra Violet (UV) Radiation Dose (requires UV sensor)

Current Data Latest Daily Total (user resetable at any time from Current Screen)

Moon Phase

Gibbous, Last Quarter, Waning Cresent

Sunrise and Sunset

 Resolution
 1 minute

 Accuracy
 ±1 minute

Clock

Accuracy ±8 seconds/month Resolution 1 minute

Units Time: 12 or 24 hour format (user-selectable)

Date: US or International format (user-selectable)

Adjustments Time: Automatic Daylight Savings Time (for users in North America, Europe and Australia

that observe it in AUTO mode, MANUAL setting available for all other areas)

Date: Automatic Leap Year

Alarms..... Once per day at set time when active

Sensor Charts

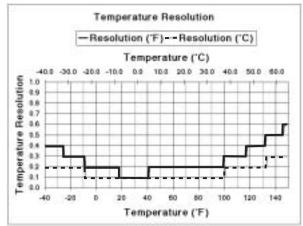


Figure 1. Temperature Resolution

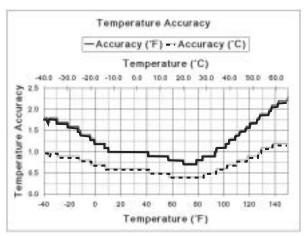


Figure 2. Temperature Accuracy

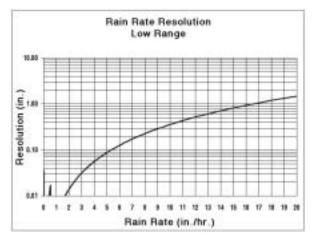


Figure 3. Low Range Rain Rate Resolution

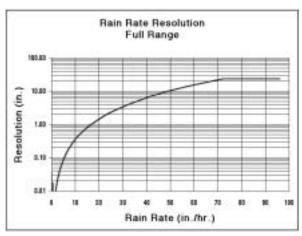


Figure 4. Full Range Rain Rate Resolution